
How to upgrade the firmware for Axis cameras

- 1. Download the recommended firmware version to your computer.
- 2. Log in to the product as an administrator.
- Go to Settings > System > Maintenance in the camera's web page and follow the instructions:

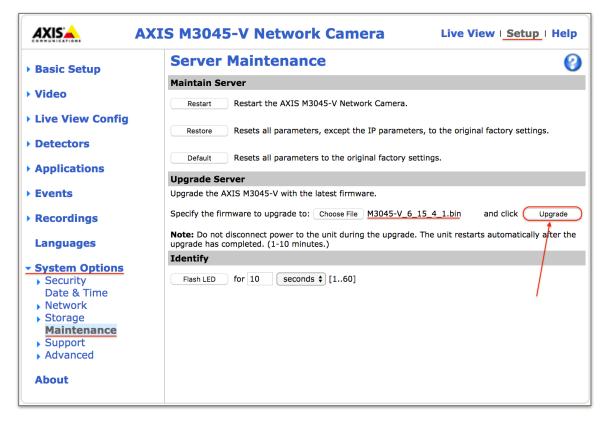

4. Please be advised that the upgrade may take a while. During this process, please do not turn off power to the device. When the upgrade is finished, the product will restart automatically as follows:

